

Seal Removal - Karl Harris

Posted by Erickulaas on Sunday, 26 March 2006 (05:58:17) Central Standard Time
Contributed by Erickulaas



Here's a way to change seals without having to remove housings or disassemble components. It saves time & money if you do not have to reseal the whole component or have to even remove from machine to do. You take a small drill and drill through the seal being carefull not to go in deeper than the seal metal and not to get into the housing or shaft. Then screw some metal screws into the holes and pop the seal out by prying it out. I have done this on several applications including wheel motors, deck motors, steering controls etc... and I have had great success.



