



580400

Illustrated Parts List

Model Series

580400

950cc

GAS

TYPE NUMBERS


0105, 0110, 0112, 0113,
0115, 0116, 0205, 0210,
0215, 0216, 0218, 0220,
0221, 0225, 0305, 0310,
0311, 0313, 0315, 0316,
0318, 0320, 0321, 0325,
0327, 0328, 0333.

REFER TO REPAIR MANUAL MS0750 FOR ASSEMBLY AND TORQUE REQUIREMENTS.

PRINTED IN U.S.A.




COPYRIGHT by BRIGGS & STRATTON DAIHATSU LLC
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton DAIHATSU LLC.

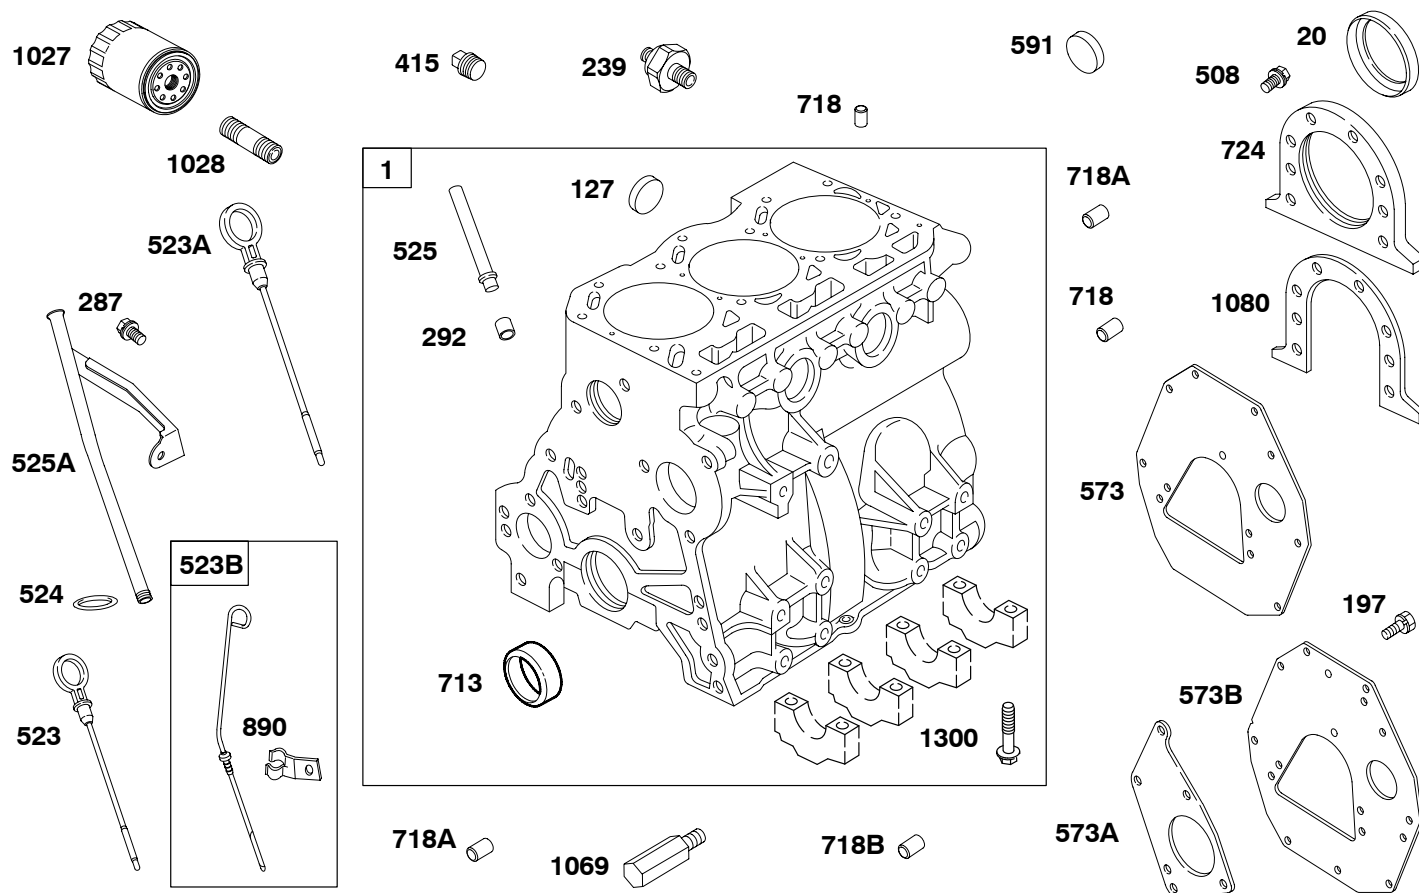

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	825595	Cylinder Assembly (9 mm Head Bolts) (Used After Code Date 98123100). ----- Note ----- 825026 Cylinder Assembly (8 mm Head Bolts) (Used Before Code Date 99010100).	523	821158	Dipstick (Short)	525	820144	Tube-Dipstick (Short)
20	821073	Seal-Oil (PTO Side)	523A	820646	Dipstick (Long) Used on Type No(s). 0313, 0333. ----- Note ----- 820572 Dipstick (Long) Used on Type No(s). 0112, 0113.	525A	820652	Tube-Dipstick (Long) Type No(s) 0313, 0333.
127	820004	Plug-Welch	523B	825287	Dipstick (Used After Code Date 98123100). Used on Type No(s). 0112. ----- Note ----- 825081 Dipstick (Used Before Code Date 99010100). Used on Type No(s). 0112.	573	820170	Plate-Back
197	820176	Screw (Back Plate)	524	820654	Seal-Dipstick Tube	573A	820147	Plate-Back
239	821135	Switch-Oil Pressure				573B	820917	Plate-Back
287	820273	Screw (Dipstick Tube)				591	821069	Plug-Camshaft
292	820662	Collar-Dipstick Tube				713	821299	Bushing-Camshaft
415	820051	Plug (Cylinder)				718	820063	Pin-Locating
508	820031	Screw (Seal Retainer)				718A	820062	Pin-Locating
						718B	820061	Pin-Locating
						724	820146	Retainer-Seal
						890	820238	Bracket-Support Used on Type No(s). 0112.
						1027	491056	Filter-Oil
						1028	820851	Adapter-Oil Filter
						1069	820102	Nozzle-Oil
						1080	820145	Gasket-Seal Retainer
						1300	820042	Screw (Crankshaft Bearing Cap)

Engine Gasket Set-Reference 358


Carburetor Overhaul Kit-Reference 121, 121A
Valve Gasket Set-Reference 1095

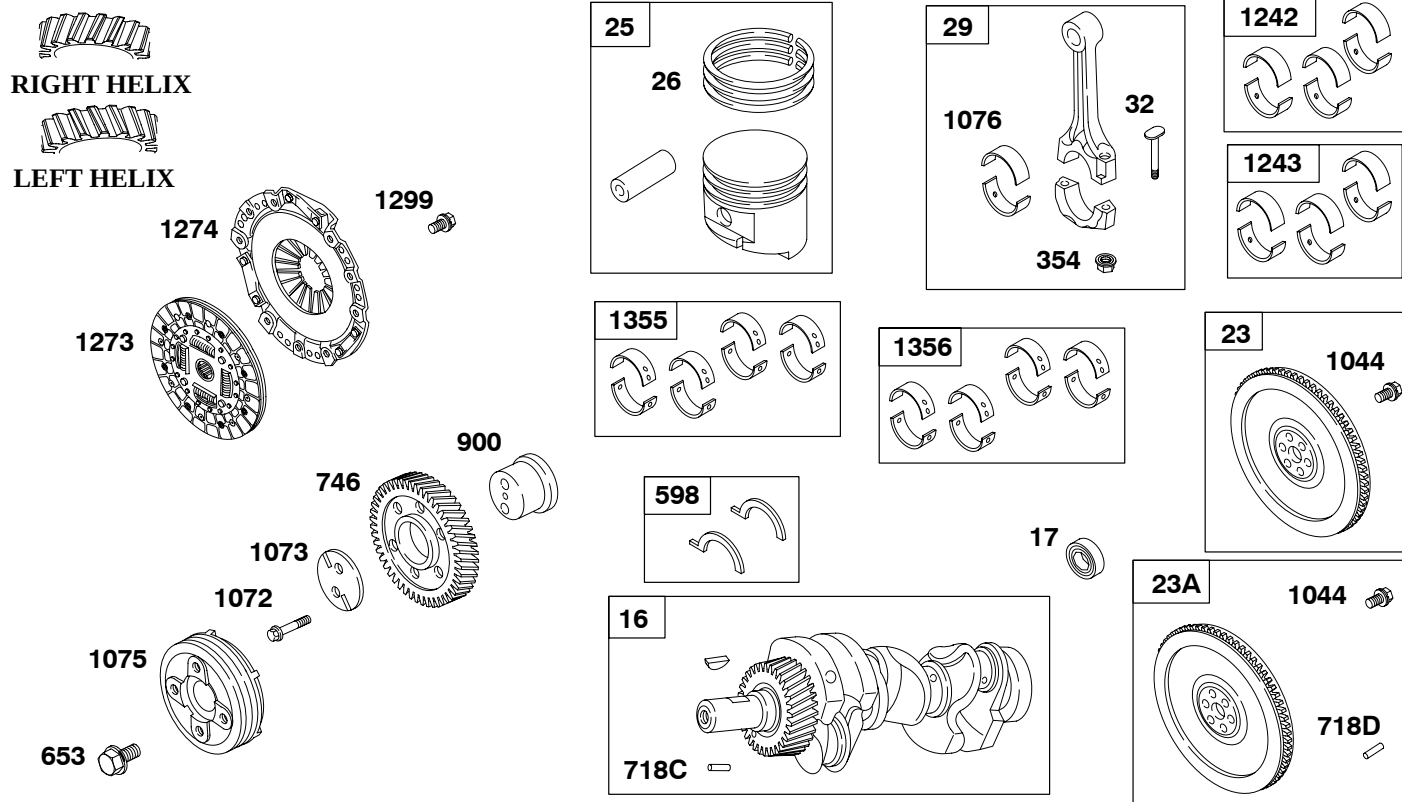

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	825552	Crankshaft (Right Helix) (Used After Code Date 98123100). ----- Note ----- 825193 Crankshaft (Left Helix) (Used Before Code Date 99010100).	29	825033	Rod-Connecting	900	820116	Shaft-Gear
			32	820128	Screw (Connecting Rod)	1044	820080	Screw (Flywheel)
			354	820073	Nut (Connecting Rod)	1072	820081	Screw (Idle Gear Plate)
			598	821295	Shim-Endplay (Crankshaft) (Standard) ----- Note ----- 821297 Shim- Endplay (Crankshaft) (.010" Oversize)	1073	820117	Plate-Idle Gear
17	820919	Bearing-Ball (Flywheel) Used on Type No(s). 0311.				1075	820236	Pulley-Crankshaft
23	825303	Flywheel	653	820079	Screw (Crankshaft Pulley)	1076	820142	Bearing/STD-Rod
23A	825488	Flywheel Used on Type No(s). 0311.	718C	820059	Pin-Locating	1242	825019	Bearing Set/STD-Rod
			718D	821033	Pin-Locating Used on Type No(s). 0311.	1243	825060	Bearing Set/010"-Rod
25	825203	Piston Assembly (Standard) ----- Note ----- 825204 Piston Assembly (.010" Oversize)	746	820611	Gear-Idler (Left Helix) (Used After Code Date 98123100). ----- Note ----- 825013 Gear-Idler (Right Helix) (Used Before Code Date 99010100).	1273	820923	Disc-Clutch Type No(s) 0311.
26	825036	Ring Set ----- Note ----- 825034 Ring Set (.010" Oversize)				1274	825492	Clutch-Pressure Plate Type No(s) 0311.
						1299	820212	Screw (Pressure Plate Clutch) Type No(s) 0311.
						1355	825040	Bearing Set/STD-Main
						1356	825039	Bearing Set/010"-Main

Engine Gasket Set-Reference 358


Carburetor Overhaul Kit-Reference 121, 121A
Valve Gasket Set-Reference 1095

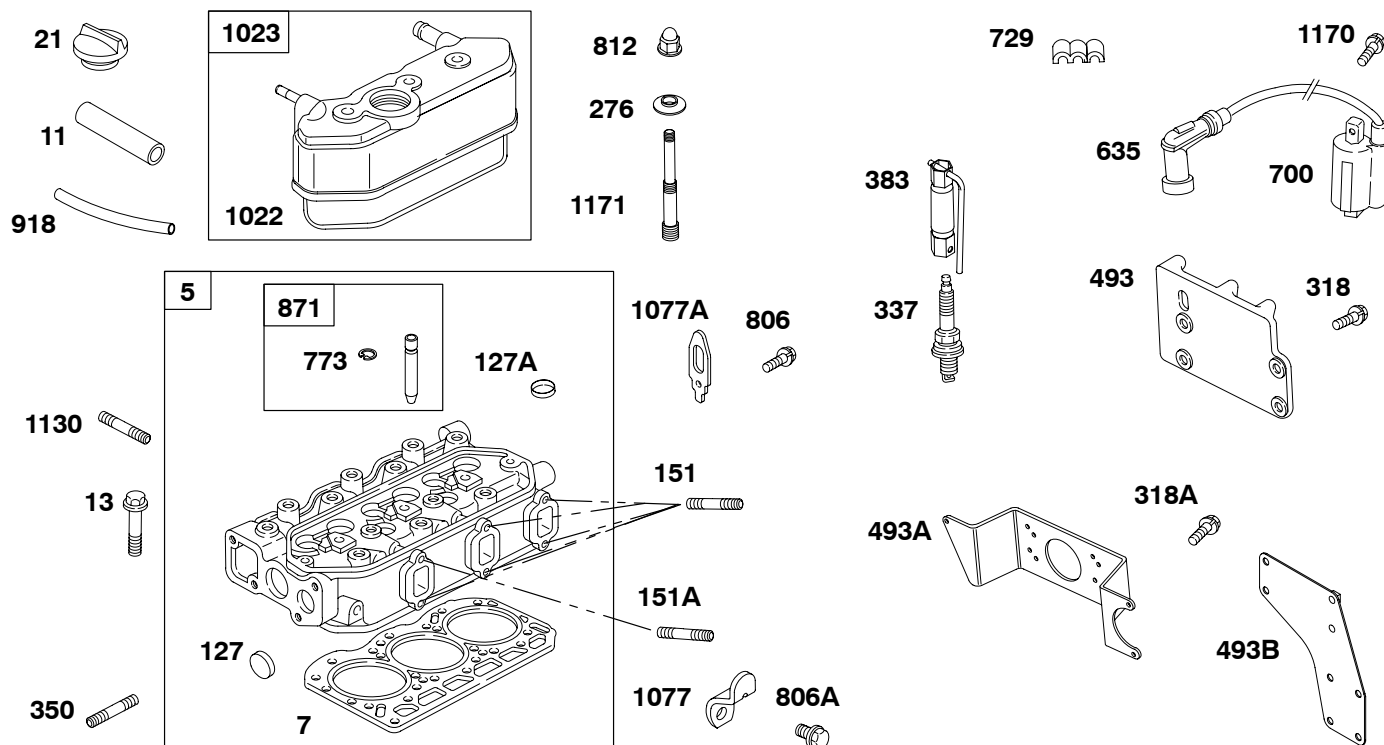

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
5	825693	Head-Cylinder	276	820064	Washer-Sealing	700	820037	Coil-Ignition
7	820648	Gasket-Cylinder Head			(Rocker Cover)	729	820672	Clip-Wire
11	820048	Tube-Breather	318	820024	Screw	773	820130	Retainer
		----- Note -----			(Mounting Bracket)			(Valve Guide Bushing)
		820886 Tube-Breather			----- Note -----	806	820212	Screw
		Used on Type No(s).			820023 Screw			(Lifting Bracket)
		0311.			(Mounting Bracket)	806A	820024	Screw
13	820623	Screw			Used on Type No(s).			(Lifting Bracket)
		(Cylinder Head)			0112, 0113, 0116,	812	820071	Nut
		(9 mm)			0220, 0313, 0318,			(Rocker Cover)
		(Used After Code Date	318A	820273	Screw	871	825030	Bushing-Valve Guide
		98123100).			(Mounting Bracket)	918	820393	Hose-Vacuum
		----- Note -----			Used on Type No(s).	1022	820150	Gasket-Rocker Cover
		820074 Screw			0112, 0113, 0116,	1023	825277	Cover-Rocker
		(Cylinder Head)			0220, 0313, 0318,			(Order
		(8 mm)			0320.			Reference 1019,
		(Used Before Code	337	491055S	Plug-Spark			Label Kit,
		Date 99010100).	350	820078	Stud			Reference 1036,
21	825024	Cap-Oil Fill			(Water Pump)			Emissions Label,
127	820004	Plug-Welch	383	19374S	Wrench-Spark Plug			for your Model, Type,
127A	820005	Plug-Welch	493	820083	Bracket-Mounting			Trim with Engine Date
151	820014	Stud			(Ignition Coil)			Code)
		(Exhaust Manifold)	493A	820480	Bracket-Mounting	1077	820260	Bracket-Lifting
151A	820466	Stud	493B	820251	Bracket-Mounting	1077A	820254	Bracket-Lifting
		(Exhaust Manifold)	635	820084	Boot-Spark Plug	1130	820015	Stud
								(Intake Manifold)
						1170	820012	Screw
								(Ignition Coil)
						1171	820076	Stud
								(Rocker Cover)

Engine Gasket Set-Reference 358


Carburetor Overhaul Kit-Reference 121, 121A
Valve Gasket Set-Reference 1095

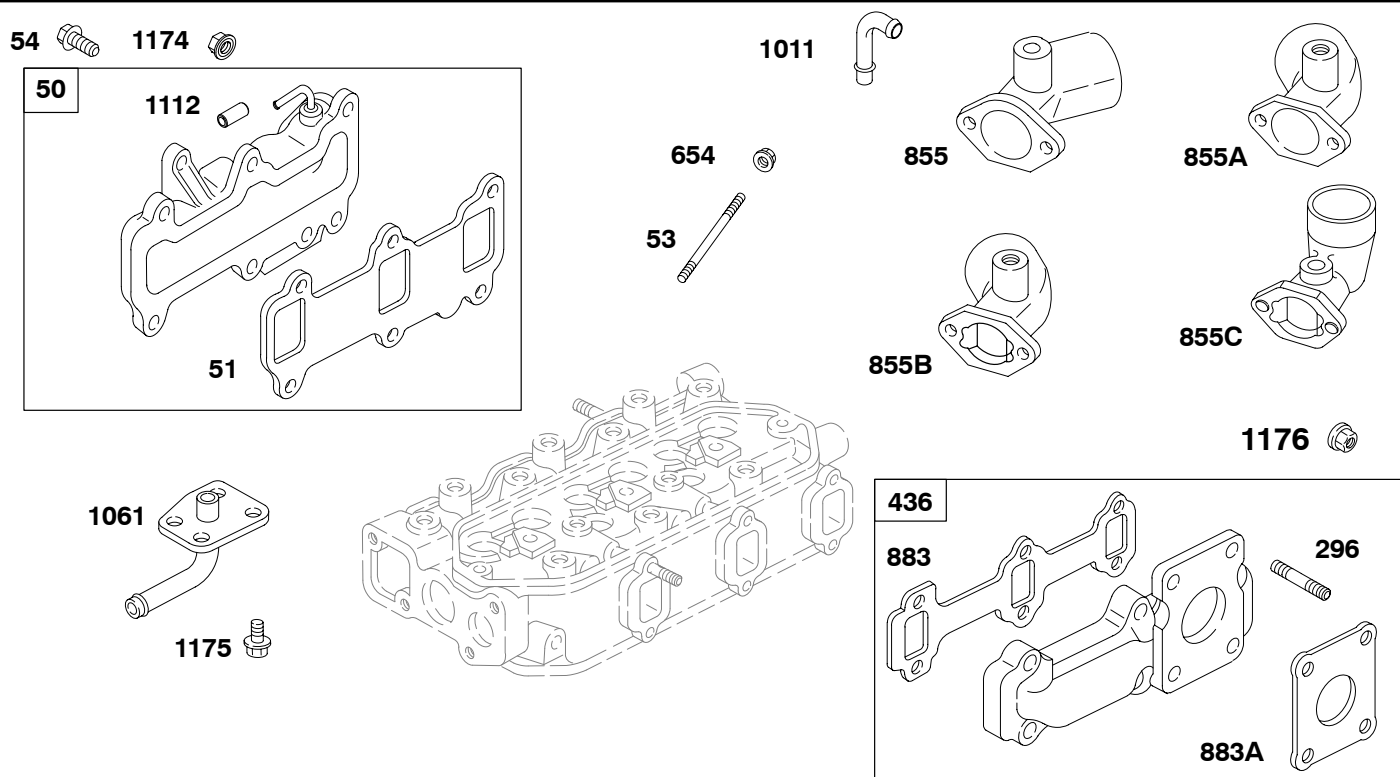


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
50	825261	Manifold-Intake ----- Note ----- 825260 Manifold-Intake Used on Type No(s). 0311.	855	820161	Adapter-Air Cleaner (Parallel to Crankshaft)	1011	820184	Tube-Vent (Air Cleaner Adapter)
51	820087	Gasket-Intake	855A	820595	Adapter-Air Cleaner (Perpendicular to Crankshaft)	1061	820090	Cover-Outlet (Used Before Code Date 01101100).
53	820077	Stud (Carburetor Mounting)	855B	820921	Adapter-Air Cleaner (Perpendicular to Crankshaft)	1112	820543	Plug-Vent (Intake Manifold)
54	820031	Screw (Intake Manifold)	855C	820446	Adapter-Air Cleaner Type No(s) 0112, 0113.	1174	820069	Nut (Intake Manifold)
296	820553	Stud (Muffler)			----- Note ----- 821133 Adapter-Air Cleaner Type No(s) 0313.	1175	820034	Screw (Outlet Cover)
436	825055	Manifold-Exhaust	883	820817	Gasket-Exhaust (Exhaust Manifold)	1176	820010	Nut (Exhaust Manifold)
654	820011	Nut (Carburetor)	883A	821001	Gasket-Exhaust (Muffler)			

Engine Gasket Set-Reference 358

Carburetor Overhaul Kit-Reference 121, 121A
Valve Gasket Set-Reference 1095

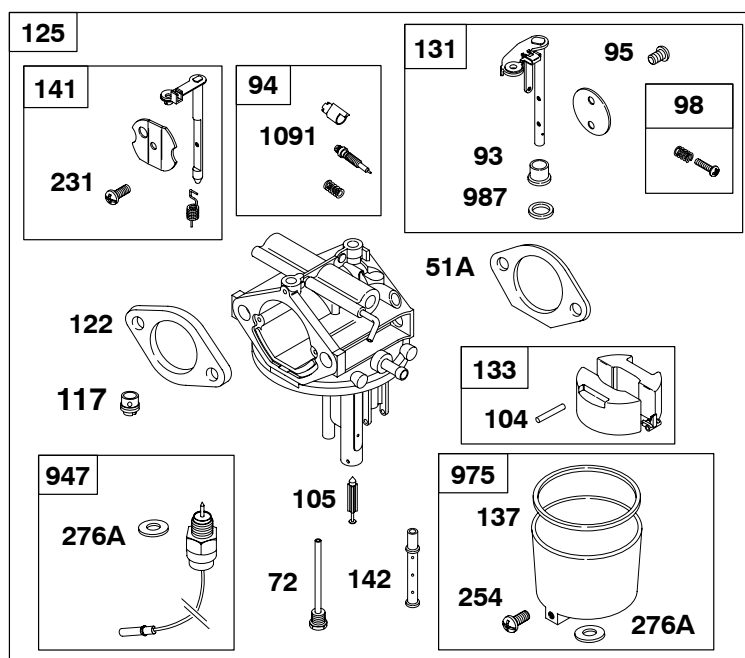

AISAN MANUAL CHOKE

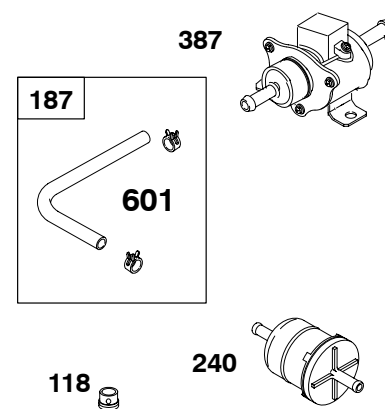


121 CARBURETOR OVERHAUL KIT

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51A	820385	Gasket-Intake	118	821056	Jet-Main (High Altitude) (2,400 to 6,600 Feet) (Used After Code Date 02033100).	125	825569	Carburetor (Used After Code Date 01073100).
72	820626	Tube-Jet			----- Note -----			----- Note -----
93		Bushing-Throttle Shaft (Sold In Kit Only)			820458 Jet-Main (High Altitude) (2,400 to 6,600 Feet) (Used Before Code Date 02040100).			825207 Carburetor (Used Before Code Date 01080100).
94	825241	Kit-Idle Mixture			----- Note -----			Used on Type No(s). 0110, 0112, 0113, 0115, 0210, 0215.
95	820485	Screw (Throttle Valve)			820457 Jet-Main (High Altitude) (6,000 to 10,000 Feet) (Used After Code Date 02033100).			825320 Carburetor Used on Type No(s). 0105, 0205. (Used Before Code Date 01080100).
98	825242	Kit-Idle Speed			820540 Jet-Main (High Altitude) (6,000 to 10,000 Feet) (Used Before Code Date 02040100).	131	825570	Kit-Throttle Shaft
104	690739	Pin-Float Hinge				133	825240	Float-Carburetor
105	820486	Valve-Needle Valve				137	820489	Gasket-Float Bowl
117	821049	Jet-Main (Standard) (Used After Code Date 01073100).				141	825298	Kit-Choke Shaft
		----- Note -----				142	821051	Nozzle-Carburetor
		820457 Jet-Main (Standard) (Used Before Code Date 01080100). Used on Type No(s). 0105, 0205, 0218, 0220, 0221, 0225.	121	825575	Kit-Carburetor Overhaul	187	825044	Line-Fuel
			122	820082	Spacer-Carburetor	231	820485	Screw (Choke Valve)
		820627 Jet-Main (Standard) (Used Before Code Date 01070100). Used on Type No(s). 0110, 0112, 0113, 0115, 0116, 0210, 0215, 0216.				240	821026	Filter-Fuel
						254	820491	Drain-Carburetor Bowl
						276A	692343	Washer-Sealing
						387	825232	Pump-Fuel
						601	820006	Clamp-Hose
						947	825377	Solenoid-Fuel
						975	825239	Bowl-Float
						987	690734	Seal-Throttle Shaft
						1091	691515	Cap-Limiter

Engine Gasket Set-Reference 358

Carburetor Overhaul Kit-Reference 121, 121A
Valve Gasket Set-Reference 1095

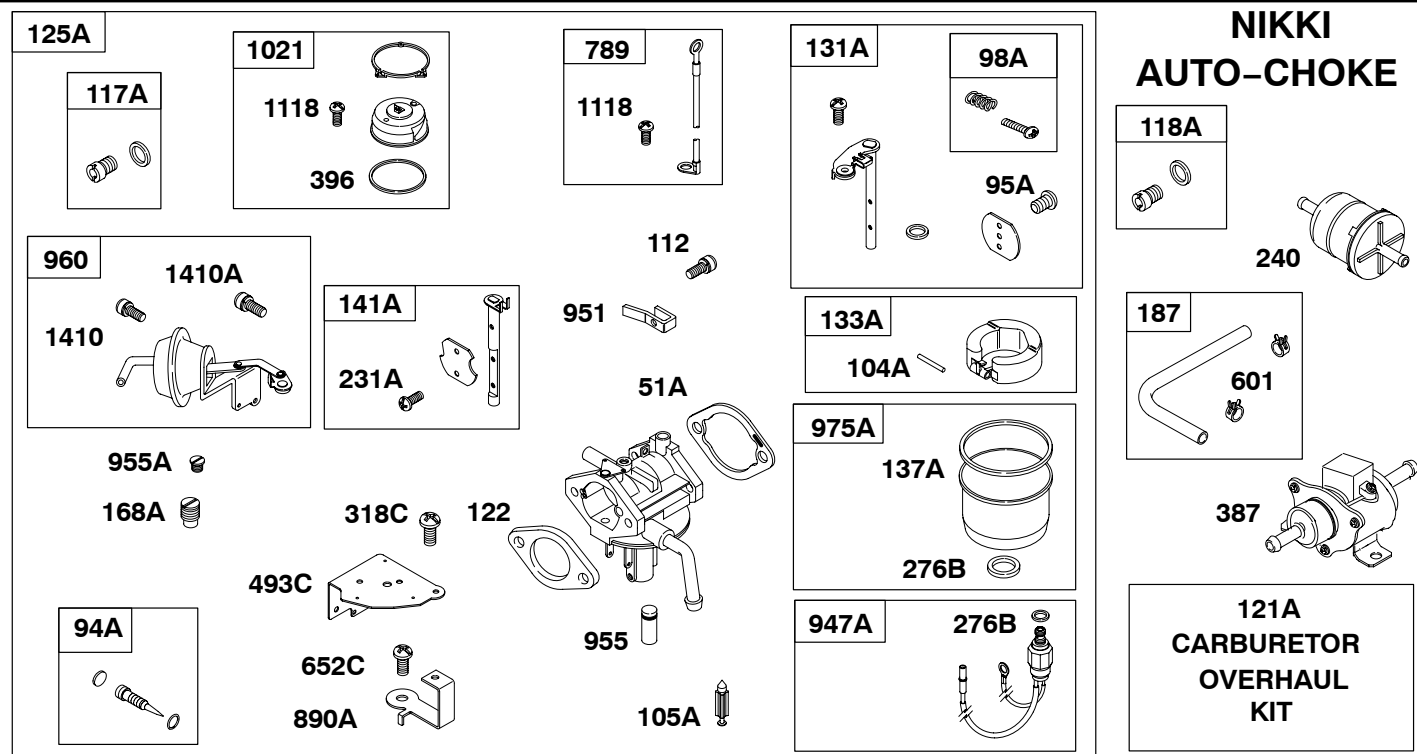


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51A	820385	Gasket-Intake	122	820082	Spacer-Carburetor	601	820006	Clamp-Hose
94A	825374	Kit-Idle Mixture	125A	825490	Carburetor	652C	820514	Screw
95A	820504	Screw			Used on Type No(s). 0311.			(Support Bracket)
98A	825616	Kit-Idle Speed	131A	825559	Kit-Throttle Shaft	789	825257	Harness-Wiring
104A	693506	Pin-Float Hinge	133A	825248	Float-Carburetor	890A	820517	Bracket-Support
105A	820506	Valve-Float Needle	137A	820508	Gasket-Float Bowl	947A	825677	Solenoid-Fuel
112	690718	Screw	141A	825562	Kit-Choke Shaft	951	820509	Lever-Choke
		(Choke Lever)	168A	820603	Jet-Idle Circuit	955	820510	Plug-Carburetor
117A	825563	Jet-Main	187	825044	Line-Fuel			(Slow Passage)
		(Standard)	231A	820504	Screw	955A	820520	Plug-Carburetor
118A	825586	Jet-Main			(Choke Valve)			(Jet)
		(High Altitude)	240	821026	Filter-Fuel	960	825253	Choke-Vacuum Break
		(2,400 to 6,600 Feet)	276B	820511	Washer-Sealing	975A	825247	Bowl-Float
		----- Note -----	318C	820512	Screw	1021	825252	Activator-Choke
		825587 Jet-Main			(Mounting Bracket)	1118	690718	Screw
		(High Altitude)	387	825232	Pump-Fuel			(Choke Activator)
		(6,000 to 10,000 Feet)	396	820515	Gasket-Choke Cover	1410	820512	Screw
121A	825293	Kit-Carburetor	493C	820516	Bracket-Mounting			(Mounting Bracket)
		Overhaul			(Carburetor)	1410A	820513	Screw
								(Mounting Bracket)

Engine Gasket Set-Reference 358


Carburetor Overhaul Kit-Reference 121, 121A
Valve Gasket Set-Reference 1095

RIGHT HELIX

LEFT HELIX

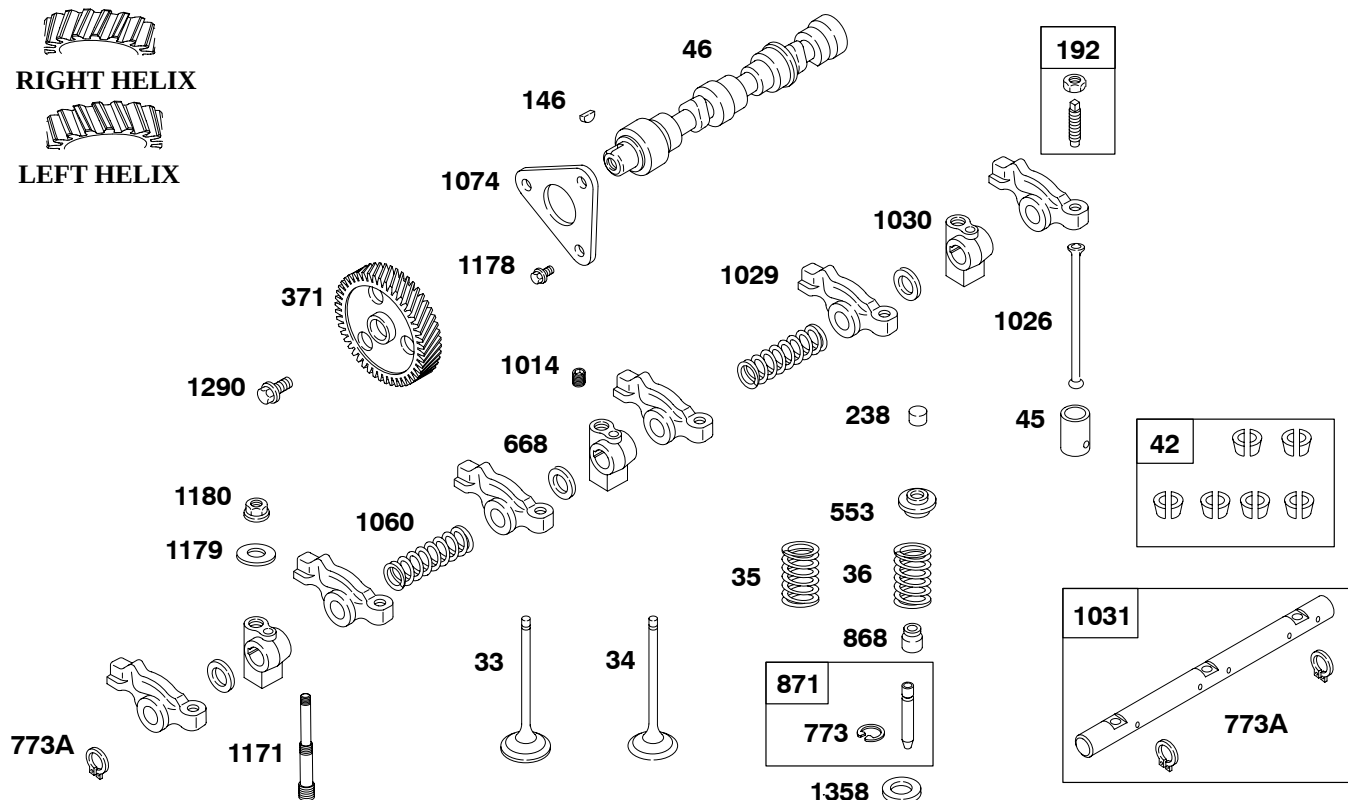


Carburetor Overhaul Kit—Reference 121, 121A
Valve Gasket Set—Reference 1095

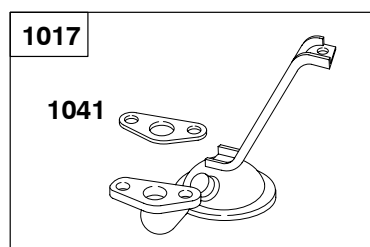

848

479

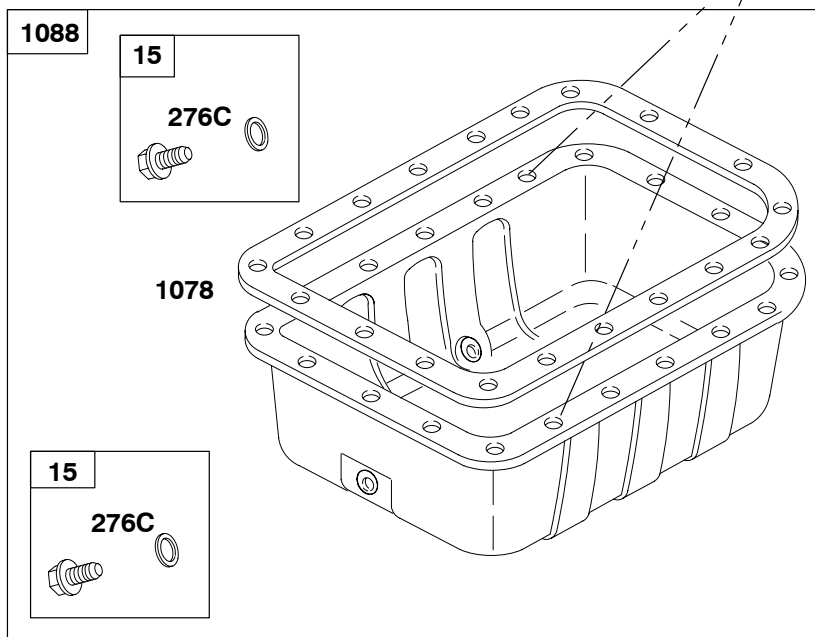


1039

952

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
15	825278	Plug–Oil Drain (16 mm)	479	820034	Screw (Oil Pump Screen)	1078	820137	Gasket–Oil Pan
		----- Note -----	848	820069	Nut (Oil Pump Screen)	1088	825734	Pan–Oil (Dual Drain) (16 mm)
		825043 Plug–Oil Drain (12 mm)	941	820017	Stud (Oil Pan)			
276C	820582	Washer–Sealing (Oil Drain Plug) (16 mm)	952	820068	Nut (Oil Pan)			
		----- Note -----	1017	825089	Screen–Oil Pump			
		820049 Washer–Sealing (Oil Drain Plug) (12 mm)	1039	820034	Screw (Oil Pan)			
			1041	820104	Gasket–Oil Pump Screen			

Engine Gasket Set–Reference 358


Carburetor Overhaul Kit–Reference 121, 121A
Valve Gasket Set–Reference 1095

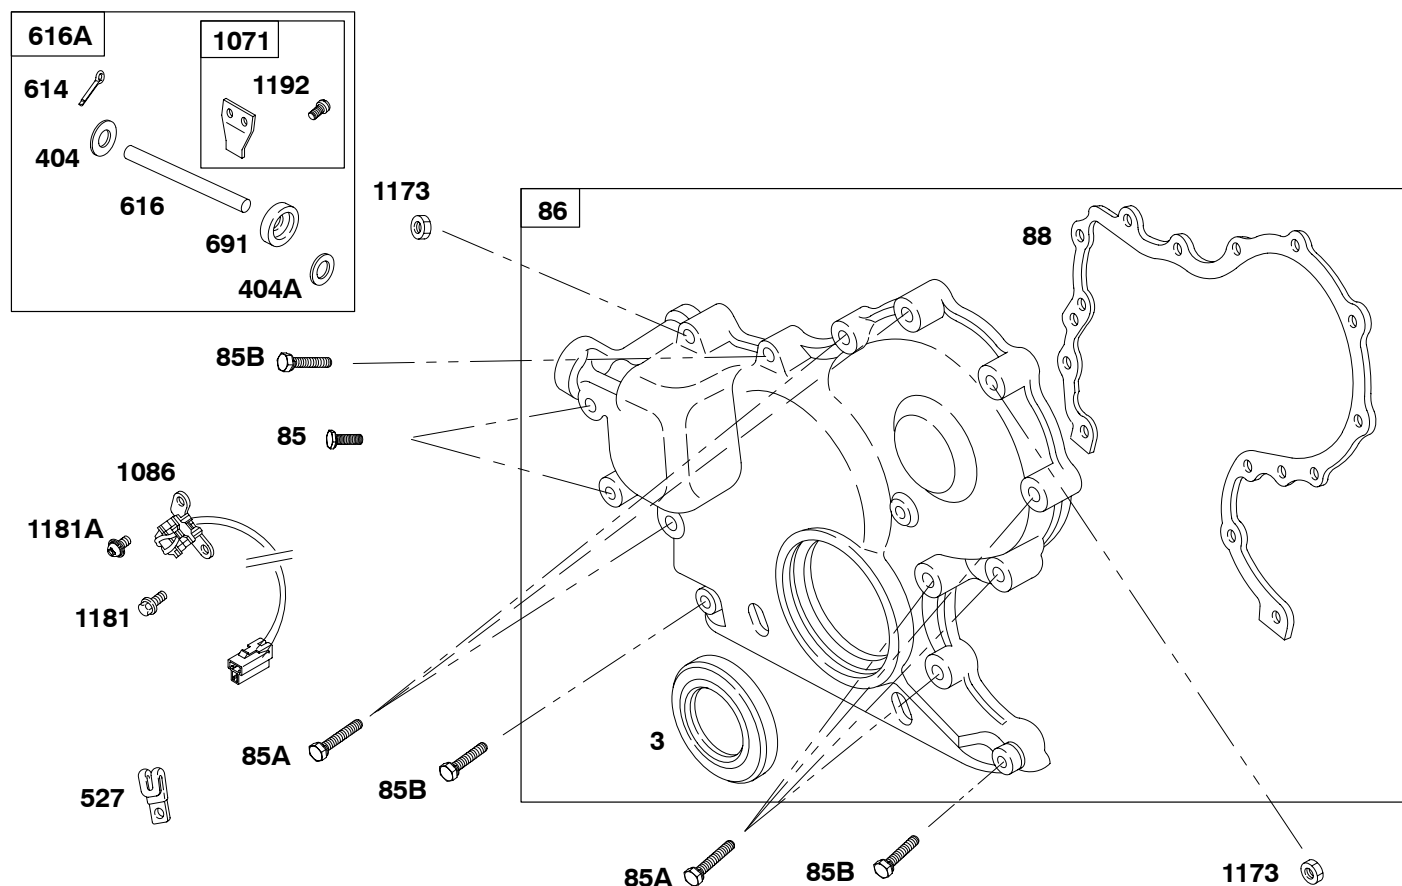

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	821071	Seal–Oil (Magneto Side)	88	820148	Gasket–Gear Reduction Cover	527	820047	Clamp–Tube
85	820026	Screw (Gear Cover to Gear Reduction Case)	404	820167	Washer (Governor Crank)	1071	825086	Paddle–Governor
85A	820029	Screw (Gear Cover to Gear Reduction Case)	404A	820169	Washer (Governor Crank)	1086	825009	Trigger–Ignition
85B	820027	Screw (Gear Cover to Gear Reduction Case)	614	820168	Pin–Cotter	1173	820069	Nut (Gear Cover)
86	825046	Cover–Gear	616	820165	Crank–Governor (Shaft)	1181	820029	Screw (Ignition Trigger)
			616A	825087	Crank–Governor	1181A	820013	Screw (Ignition Trigger)
			691	820054	Seal–Governor Shaft	1192	820166	Screw (Governor Paddle)

Engine Gasket Set–Reference 358


Carburetor Overhaul Kit–Reference 121, 121A
Valve Gasket Set–Reference 1095

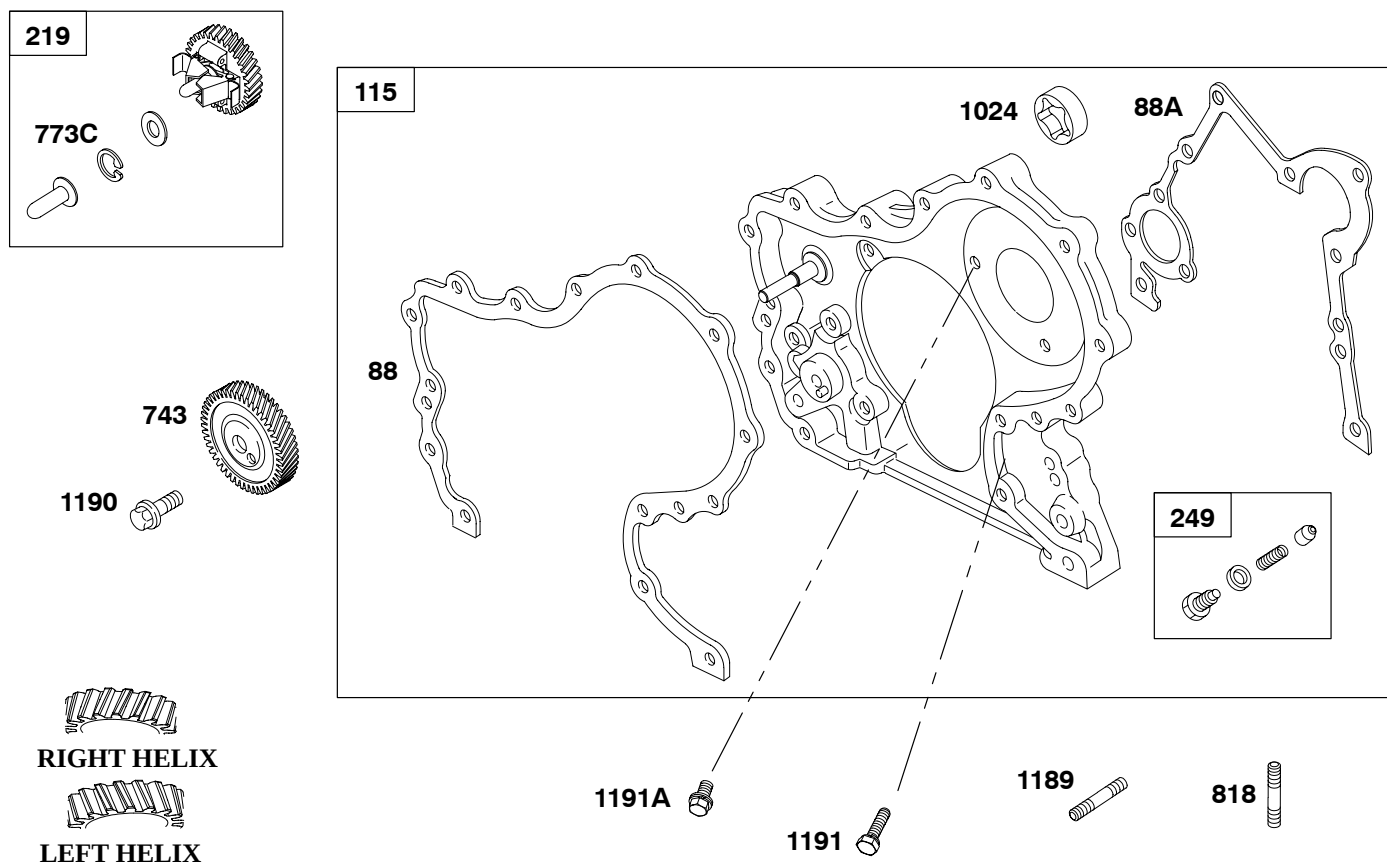

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
88	820148	Gasket-Gear Reduction Cover	249	825032	Valve-Pressure Relief	818	820016	Stud (Oil Pump Screen)
88A	820155	Gasket-Gear Reduction Cover	743	820615	Gear-Drive (Right Helix) (Used After Code Date 98123100).	1024		Pump-Oil (Sold in Gear Housing Only, Reference 115)
115	825059	Housing-Gear			----- Note -----	1189	820156	Stud (Gear Housing)
219	825331	Gear-Governor (Right Helix) (Used After Code Date 98123100).			820121 Gear-Drive (Left Helix) (Used Before Code Date 99010100).	1190	820180	Screw (Drive Gear)
		----- Note -----				1191	820030	Screw (Gear Housing)
		825085 Gear-Governor (Left Helix) (Used Before Code Date 99010100).	773C	820163	Retainer (Governor Gear)	1191A	820033	Screw (Gear Housing)

Engine Gasket Set-Reference 358


Carburetor Overhaul Kit-Reference 121, 121A
Valve Gasket Set-Reference 1095

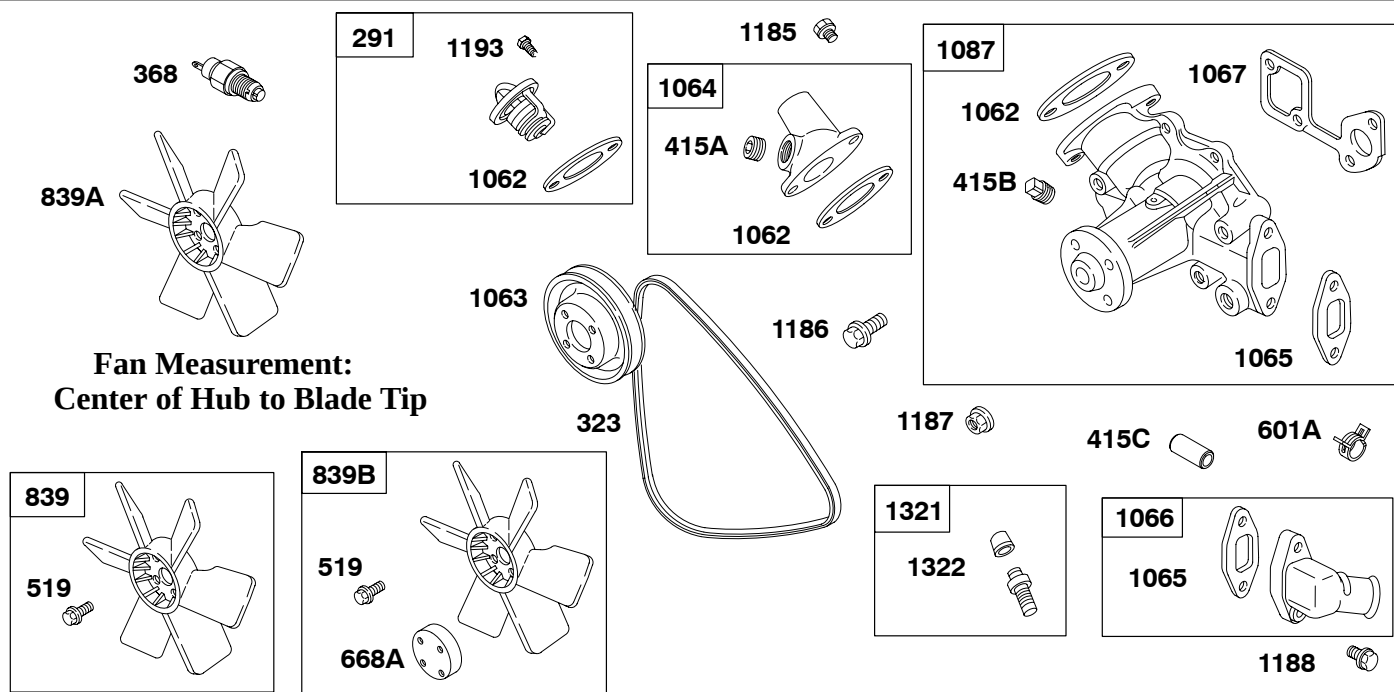

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
291	825064	Thermostat	601A	821031	Clamp-Hose Used on Type No(s). 0205, 0305, 0311.	1064	825074	Housing-Outlet (Straight) ----- Note ----- 825267 Housing-Housing (Horizontal) Used on Type No(s). 0112, 0113, 0220, 0311, 0313, 0320.
323	821075	Belt-Vee (940 mm) ----- Note ----- 820893 Belt-Vee (970 mm)	668A	820218	Spacer (Radiator Fan) Used on Type No(s). 0310, 0313, 0315, 0316.	1065	820098	Gasket-Inlet Housing
368	820208	Switch-Water Temperature (115 Degree) ----- Note ----- 820906 Switch-Water Temperature (105 Degree) Used on Type No(s). 0220, 0320.	839	825454	Fan-Radiator (320 mm Less Spacer) ----- Note ----- 825136 Fan-Radiator (320 mm Puller with Spacer) Used on Type No(s). 0313, 0315, 0316.	1066	825051	Housing-Inlet
415A	820052	Plug (Outlet Housing)	839A	820096	Fan-Radiator (290 mm Pusher) Used on Type No(s). 0305.	1067	820100	Gasket-Water Pump
415B	820182	Plug (Water Pump)	839B	825076	Fan-Radiator (Pusher) Used on Type No(s). 0310.	1087	825265	Pump-Water ----- Note ----- 825275 Pump-Water Used on Type No(s). 0305.
415C	821017	Plug Used on Type No(s). 0205, 0305, 0311.	1062	820093	Gasket-Outlet Housing	1185	820031	Screw (Outlet Housing)
519	820034	Screw (Radiator Fan) ----- Note ----- 820030 Screw (Radiator Fan) Used on Type No(s). 0110, 0112, 0113, 0115, 0116, 0210, 0215, 0216, 0310, 0313, 0315, 0316.	1063	820095	Pulley-Pump	1186	820022	Screw (Water Pump)
						1187	820181	Nut (Water Pump)
						1188	820031	Screw (Inlet Housing)
						1193	820185	Screw (Thermostat)
						1321	825638	Plug-Bleeder
						1322	821035	Cap-Bleeder

Engine Gasket Set-Reference 358


Carburetor Overhaul Kit-Reference 121, 121A
Valve Gasket Set-Reference 1095

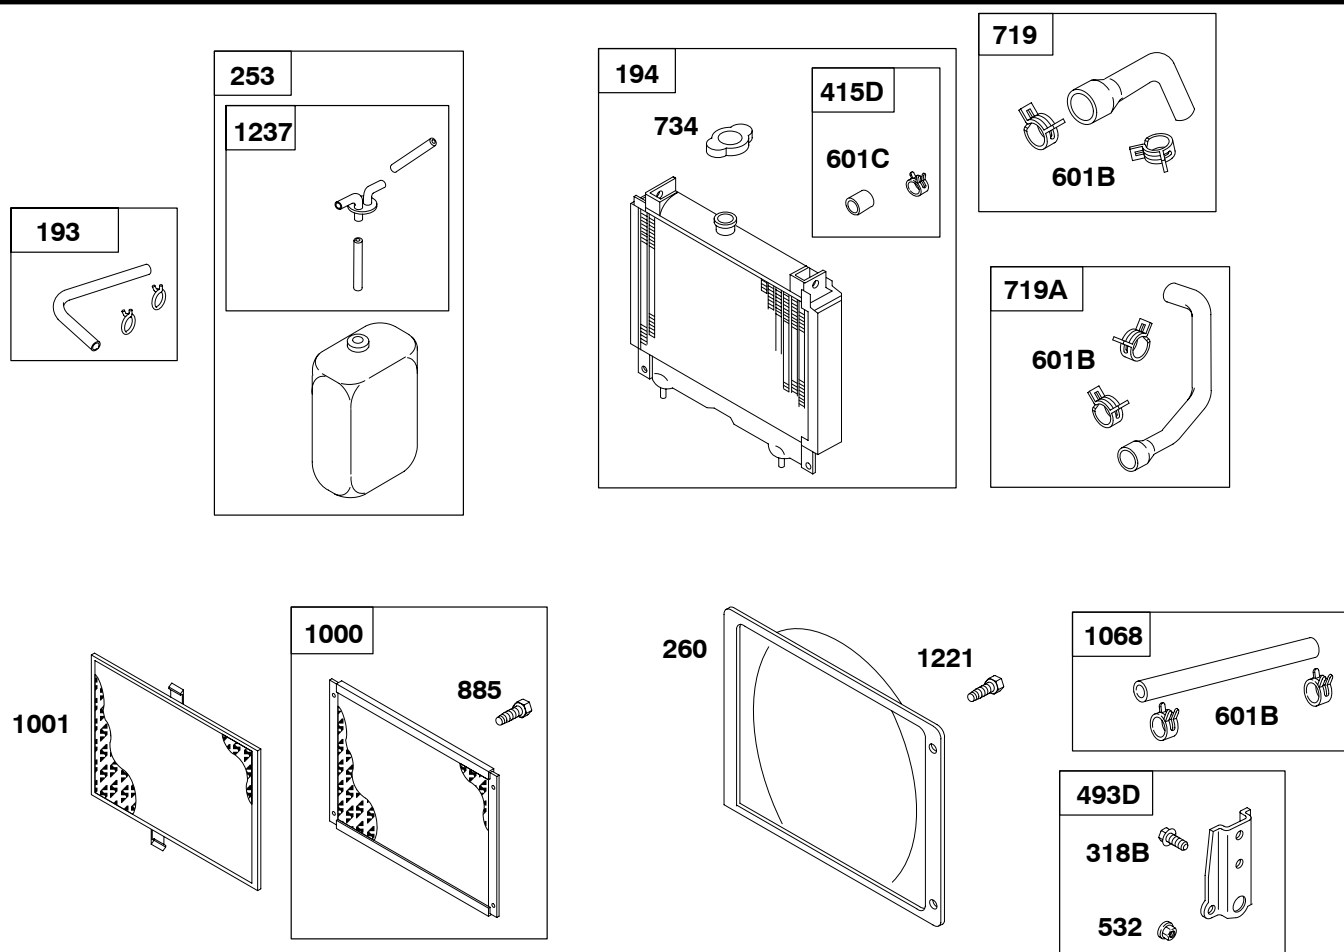

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
193	825697	Hose-Reserve Tank	415D	825075	Plug (Radiator)	1000	825103	Guard-Radiator Used on Type No(s). 0310.
194	825068	Radiator (Copper)	493D	825106	Bracket-Mounting	1001	820259	Screen-Radiator
		----- Note -----			----- Note -----	1068	825045	Hose/Clamp Assembly
		825574 Radiator (Aluminum)			825314 Bracket-Mounting	1221	820865	Screw (Fan Shroud) (340 mm)
		Used on Type No(s). 0327, 0328, 0333.			Used on Type No(s). 0115, 0215, 0315.			----- Note -----
253	825462	Tank-Reserve	532	820011	Nut (Mounting Bracket)			820636 Screw (Fan Shroud) (320 mm)
260	820863	Shroud-Fan (340 mm)	601B	820256	Clamp-Hose			Used on Type No(s). 0110, 0210, 0310.
		----- Note -----	601C	820201	Clamp-Hose	1237	825461	Cap/Hose-Reserve
		820220 Shroud-Fan (320 mm)	719	825134	Hose-Radiator			
		Used on Type No(s). 0110, 0210, 0310.	719A	825133	Hose-Radiator			
318B	820034	Screw (Mounting Bracket) (Radiator)	734	820258	Cap-Radiator			
			885	820636	Screw (Radiator Guard) Used on Type No(s). 0310.			

Engine Gasket Set-Reference 358


Carburetor Overhaul Kit-Reference 121, 121A
Valve Gasket Set-Reference 1095

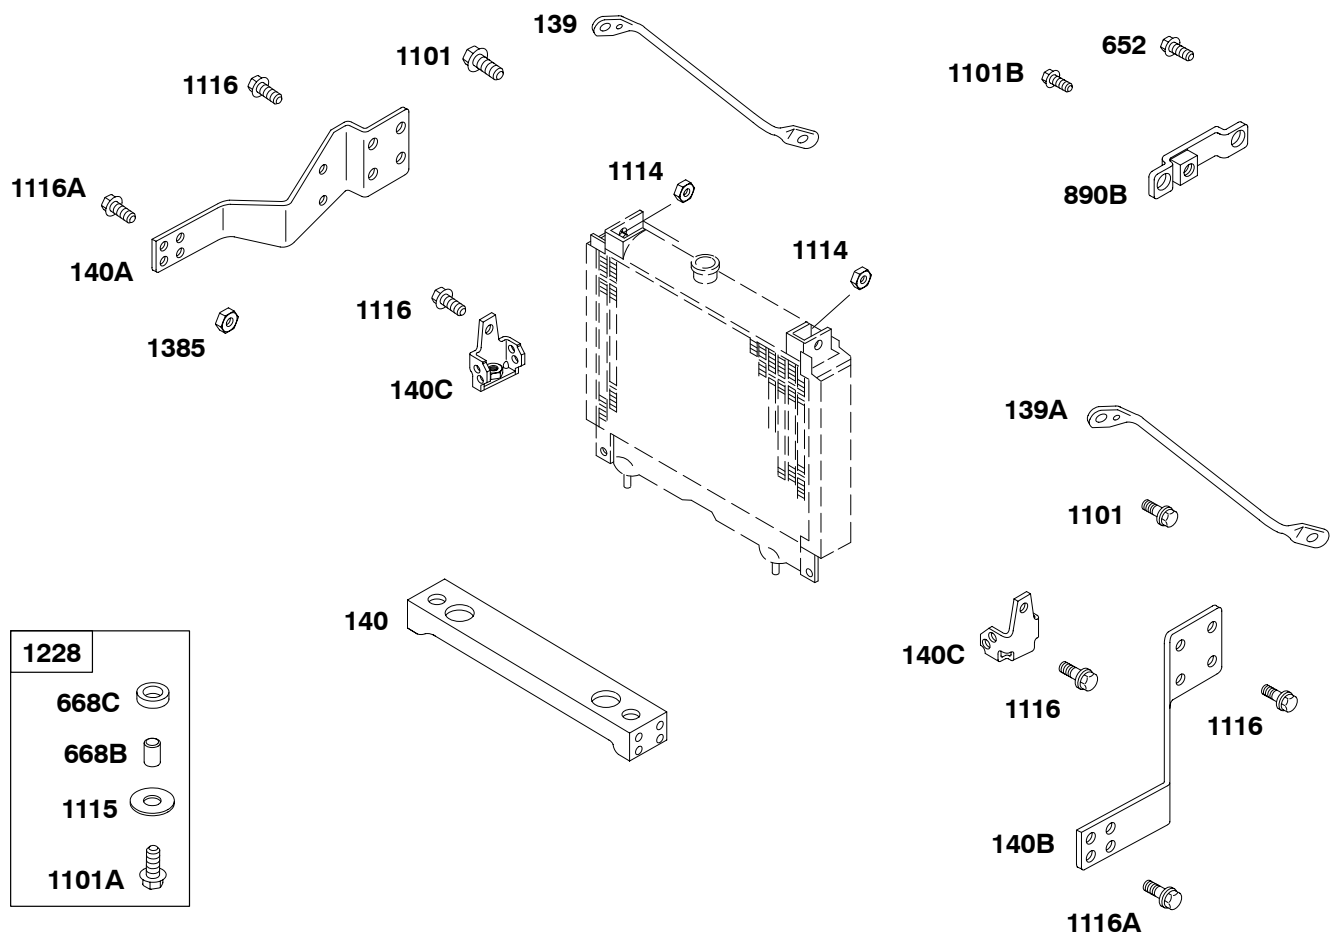

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
139	820190	Support-Radiator (Right Hand)	652	820452	Screw (Support Bracket) (Radiator)	1115	820296	Washer (Radiator Support)
139A	820191	Support-Radiator (Left Hand)	668B	820307	Spacer (Radiator Mount)	1116	820023	Screw (Radiator Bracket)
140	820255	Bracket-Radiator (Front)	668C	820198	Spacer (Radiator Mount)	1116A	820878	Screw (Radiator Bracket)
140A	820192	Bracket-Radiator (Right Hand)	890B	820194	Bracket-Support (Radiator)	1228	825135	Mount-Radiator
140B	820193	Bracket-Radiator (Left Hand)	1101	820272	Screw (Radiator Support)	1385	820011	Nut (Radiator Bracket)
140C	820294	Bracket-Radiator (Copper Radiator)	1101A	820309	Screw (Radiator Support)			
		----- Note -----	1101B	820273	Screw (Radiator Support)			
		821039 Bracket-Radiator (Aluminum Radiator)	1114	820070	Nut (Radiator Support)			

Engine Gasket Set-Reference 358



Carburetor Overhaul Kit-Reference 121, 121A
Valve Gasket Set-Reference 1095

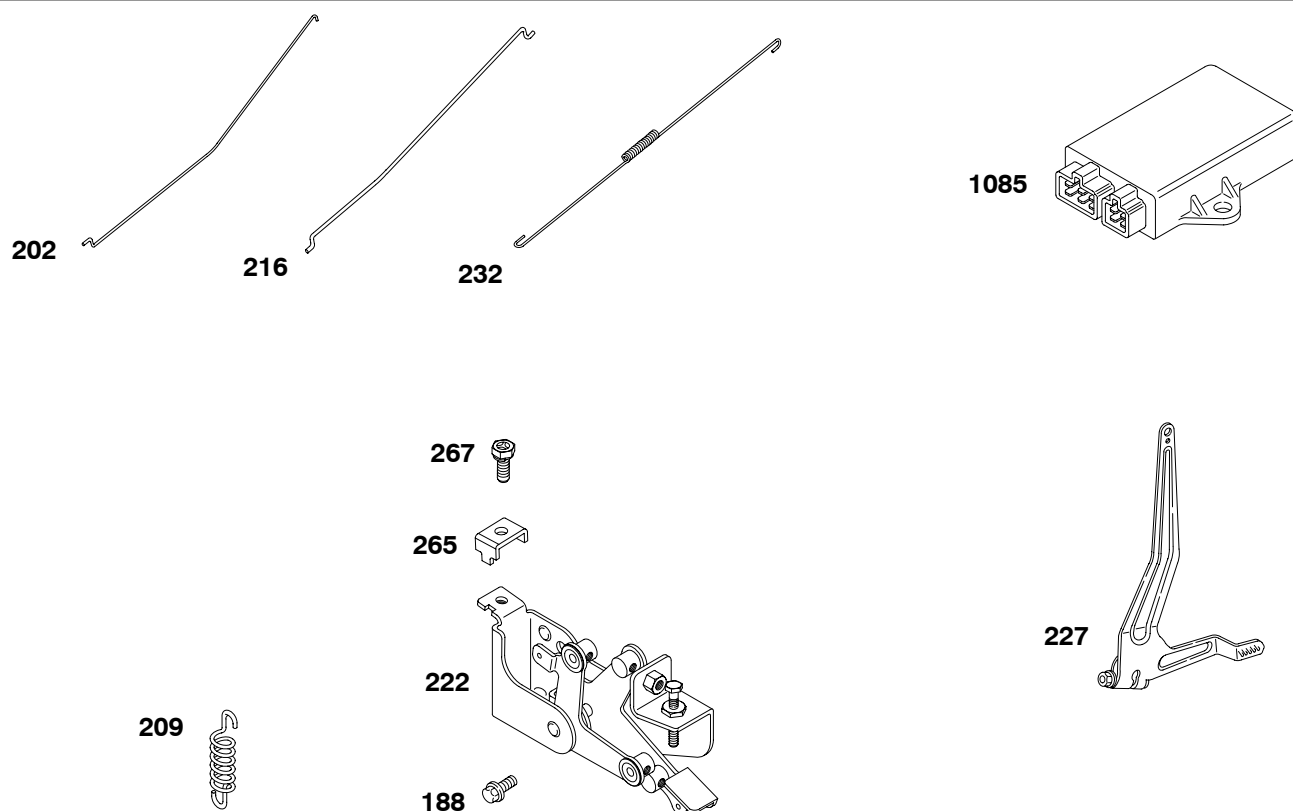

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
188	820878	Screw (Control Bracket)	209	821054	Spring-Governor (Yellow, 32 Coil) (Used After Code Date 99013100). ----- Note ----- 820175 Spring-Governor (Yellow, 19 Coil) (Used Before Code Date 99020100). 820315 Spring-Governor (Blue) Used on Type No(s). 0112, 0113, 0115, 0215, 0313.	216	820173	Link-Choke
202	820171	Link-Mechanical Governor				222	825062	Bracket-Control
						227	825061	Lever-Governor Control (Hardware Included)
						232	820172	Spring-Governor Link
						265	691024	Clamp-Casing
						267	692083	Screw (Casing Clamp)
						1085	825572	Module-Ignition

Engine Gasket Set-Reference 358

Carburetor Overhaul Kit-Reference 121, 121A
Valve Gasket Set-Reference 1095

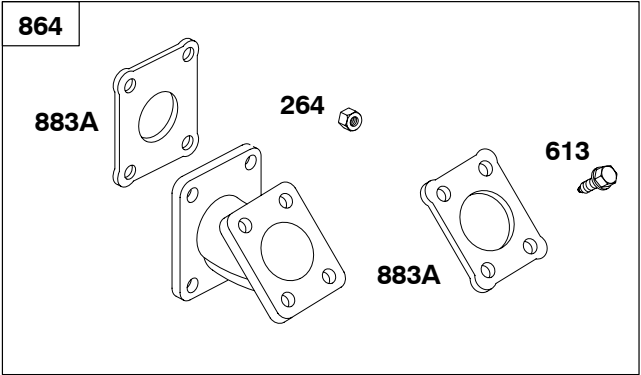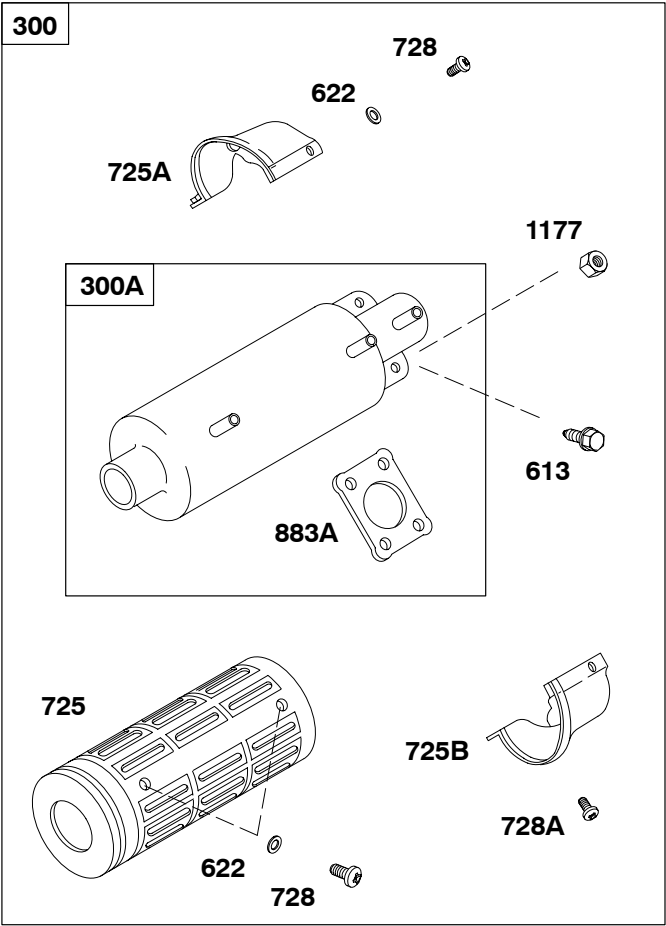


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
264	820178	Nut (Muffler Adapter)	725	820628	Shield-Heat	864	825358	Adapter-Muffler
300	825200	Muffler	725A	820630	Shield-Heat	883A	821001	Gasket-Exhaust
300A	825550	Muffler	725B	820629	Shield-Heat	1177	820178	Nut (Muffler)
613	820023	Screw (Muffler)	728	821011	Screw (Heat Shield)			
622	820631	Washer (Heat Shield)	728A	820431	Screw (Heat Shield)			

Engine Gasket Set-Reference 358

Carburetor Overhaul Kit-Reference 121, 121A
Valve Gasket Set-Reference 1095

0.8 KW

RED LABEL

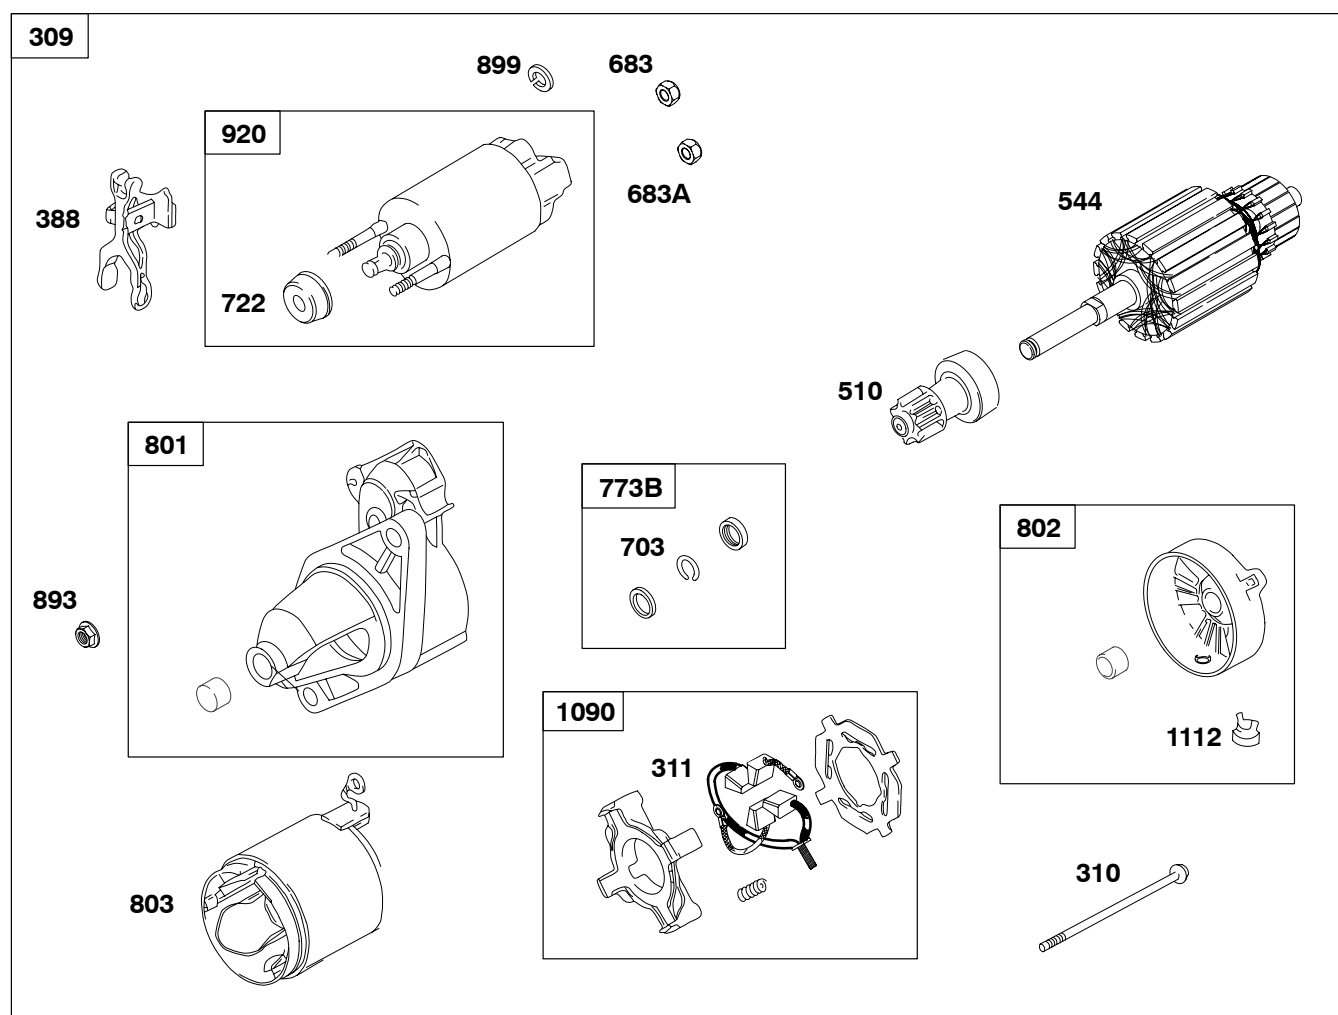


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309	825095	Motor-Starter	683	820813	Nut (Starter Solenoid) (Terminal)	893	820805	Nut (Starter Solenoid)
310	820807	Bolt (Starter Motor)				899	820811	Washer (Starter Solenoid) (Terminal)
311	825411	Brush Set	683A	820809	Nut (Starter Solenoid) (Terminal)	920	825418	Solenoid-Starter
388	820799	Lever-Pinion Drive	703	820803	Clip	1090	825412	Retainer-Brush
510	820789	Drive-Starter	722	820801	Seal-Plunger	1112	820797	Plug-Vent (End Cap)
544	825414	Armature-Starter	773B	825420	Retainer			
			801	820791	Cap-Drive			
			802	825416	Cap-End			
			803	820783	Housing-Starter			

Engine Gasket Set-Reference 358

Carburetor Overhaul Kit-Reference 121, 121A
Valve Gasket Set-Reference 1095

1.0 KW GREEN or BLUE LABEL

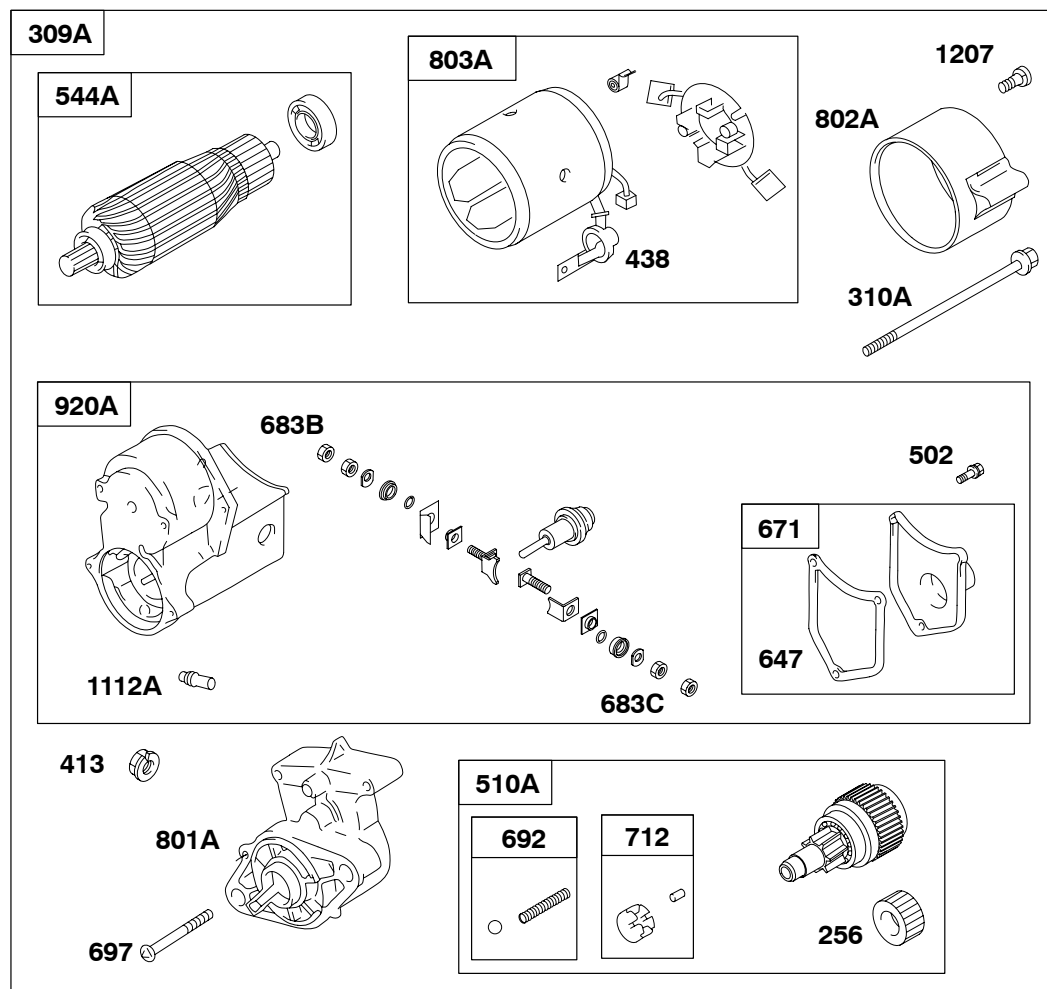


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
256	820745	Gear–Starter Drive Motor–Starter	647	820733	Gasket–Solenoid Cover	802A	820743	Cap–End
309A		(For Replacement Starter Motor, Order Reference 309B)	671	825400	Cover–Solenoid	803A	825399	Housing–Starter (Includes Brushes, Springs and Brush Retainer)
310A	820755	Bolt (Starter Motor)	683B	820723	Nut (Starter Solenoid) (Terminal)	892	692318	Switch–Key
413	820067	Nut (Starter Motor)	683C	820721	Nut (Starter Solenoid) (Terminal)	920A	825398	Solenoid–Starter
438	820725	Boot–Terminal	692	825425	Spring–Detent	1009	820019	Screw (Starter Motor)
502	820739	Screw (Solenoid Cover)	697	820751	Screw (Drive Cap)	1112A	820737	Plug–Vent (Starter Solenoid)
510A	825394	Drive–Starter	712	825424	Roller–Clutch	1207	820754	Screw (End Cap)
544A	825392	Armature–Starter	801A	825396	Cap–Drive			

Engine Gasket Set–Reference 358

Carburetor Overhaul Kit–Reference 121, 121A
Valve Gasket Set–Reference 1095

1.2 KW PURPLE/BROWN LABEL

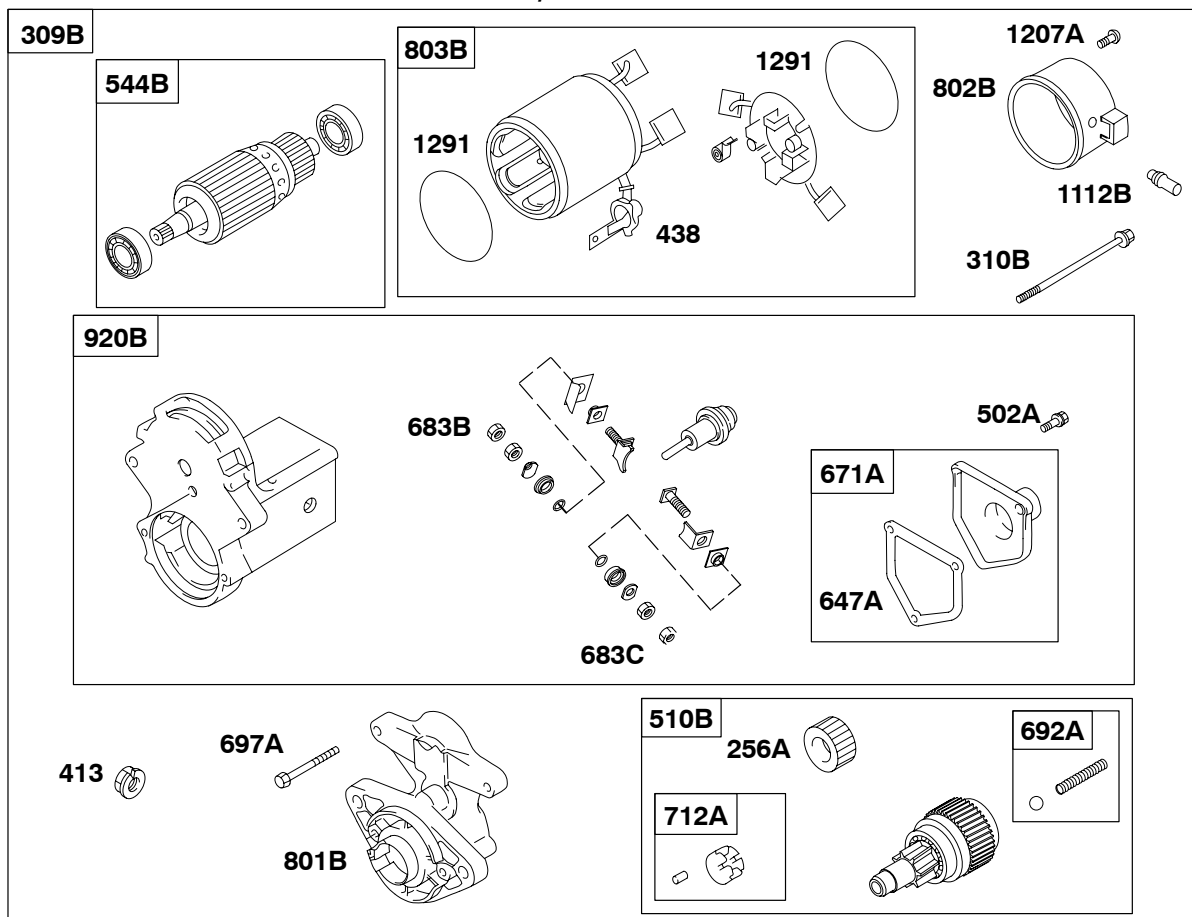


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
256A	820767	Gear-Starter Drive	683B	820723	Nut (Starter Solenoid) (Terminal)	803B	825423	Housing-Starter
309B	825700	Motor-Starter	683C	820721	Nut (Starter Solenoid) (Terminal)	920B	825702	Solenoid-Starter (Used After Code Date 05022800).
310B	820773	Bolt (Starter Motor)	692A	825402	Spring-Detent	----- Note -----		
413	820067	Nut (Starter Motor)	697A	820777	Screw (Drive Cap)	825410	820019	Solenoid-Starter (Used Before Code Date 05030100).
438	820725	Boot-Terminal	712A	825401	Roller-Clutch	1009	820019	Screw (Starter Motor)
502A	820763	Screw (Solenoid Cover)	801B	821228	Cap-Drive (Used After Code Date 05022800).	1112B	820779	Plug-Vent (End Cap)
510B	825406	Drive-Starter	----- Note -----			1207A	820775	Screw (End Cap)
544B	825404	Armature-Starter	825408	821231	Cap-Drive (Used Before Code Date 05030100).	1291	820769	Seal-O Ring (Starter Housing)
647A	820719	Gasket-Solenoid Cover	802B	821231	Cap-End (Used After Code Date 05022800).			
671A	825703	Cover-Solenoid (Used After Code Date 05022800).	----- Note -----					
----- Note -----			820771	820771	Cap-End (Used Before Code Date 05030100).			
825422 Cover-Solenoid (Used Before Code Date 05030100).								

Engine Gasket Set-Reference 358

Carburetor Overhaul Kit-Reference 121, 121A
Valve Gasket Set-Reference 1095

40 AMP

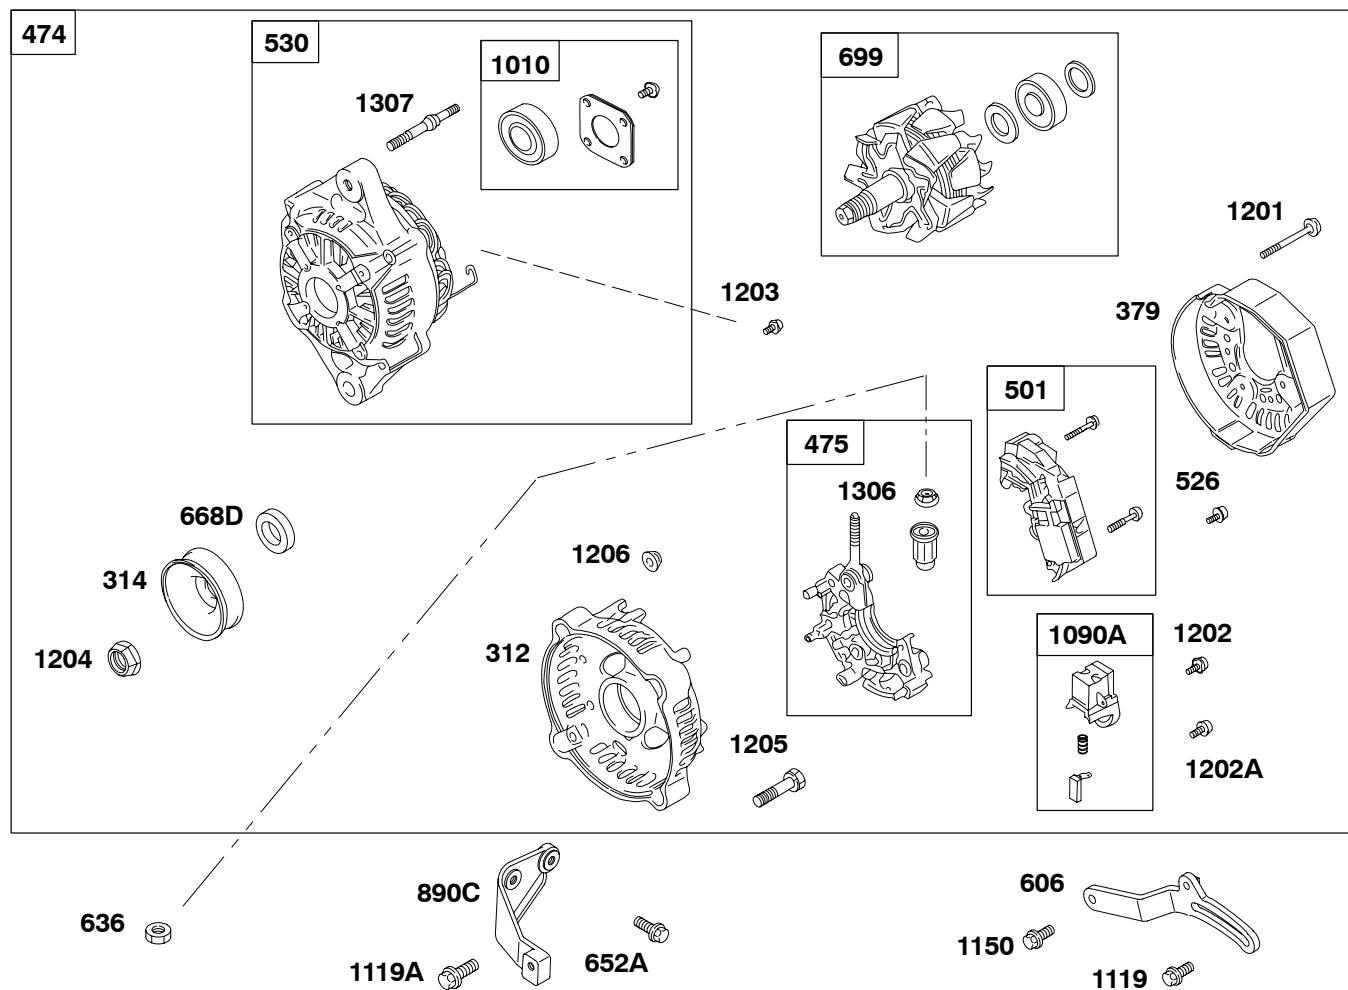


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
312	820692	Housing–Brush End	668D	820713	Spacer (Rotor Assembly)	1201	820715	Screw (Brush Cover)
314	820711	Pulley–Alternator	699	825390	Rotor Assembly	1202	820701	Screw (Brush Retainer)
379	820703	Cover–Brush	890C	820213	Bracket–Support (40 and 60 Amp)	1202A	820702	Screw (Brush Retainer)
474	825084	Alternator	1010	825384	Retainer–Bearing	1203	820702	Screw (Ground Terminal)
475	825385	Rectifier	1090A	825387	Retainer–Brush	1204	820705	Nut (Alternator Pulley)
501	825388	Regulator	1119	820483	Screw (Alternator) (40 and 60 Amp)	1205	820707	Screw (Brush End Housing)
526	820702	Screw (Regulator)	1119A	820270	Screw (Alternator) (40 and 60 Amp)	1206	820709	Nut (Brush End Housing)
530	825383	Housing–Drive End	1150	820023	Screw (Adjusting Strap) (40 and 60 Amp)	1306	820781	Nut (Rectifier)
606	820819	Strap–Adjusting (40 and 60 Amp)				1307	820690	Stud (Drive End Housing)
636	820069	Nut (Starting Switch) (40 and 60 Amp)						
652A	820275	Screw (Support Bracket) (40 and 60 Amp)						

Engine Gasket Set–Reference 358

Carburetor Overhaul Kit–Reference 121, 121A
Valve Gasket Set–Reference 1095












60 AMP

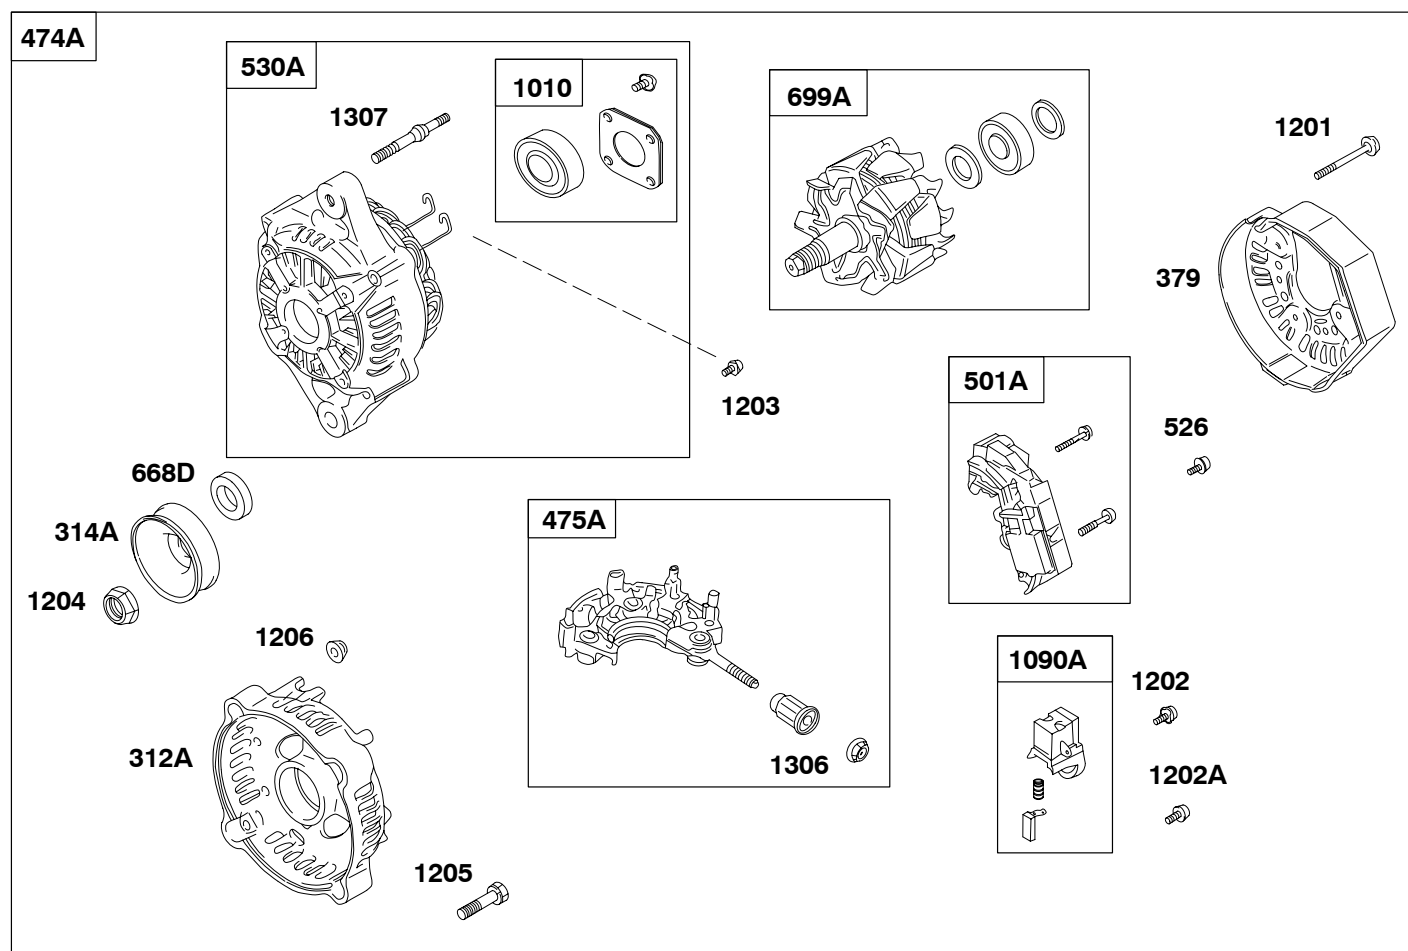

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
312A	820904	Housing-Brush End	699A	825486	Rotor Assembly	1204	820705	Nut (Alternator Pulley)
314A	820900	Pulley-Alternator	1010	825384	Retainer-Bearing	1205	820707	Screw (Brush End Housing)
379	820703	Cover-Brush	1090A	825387	Retainer-Brush	1206	820709	Nut (Brush End Housing)
474A	825577	Alternator	1201	820715	Screw (Brush Cover)	1306	820781	Nut (Rectifier)
475A	825580	Rectifier	1202	820701	Screw (Brush Retainer)	1307	820690	Stud (Drive End Housing)
501A	825481	Regulator	1202A	820702	Screw (Brush Retainer)			
526	820702	Screw (Rectifier)	1203	820702	Screw (Stator Wire)			
530A	825484	Housing-Drive End						
668D	820713	Spacer (Rotor Assembly)						

Engine Gasket Set-Reference 358



Carburetor Overhaul Kit-Reference 121, 121A
Valve Gasket Set-Reference 1095

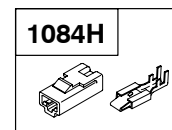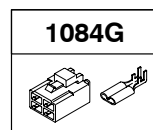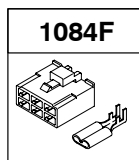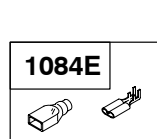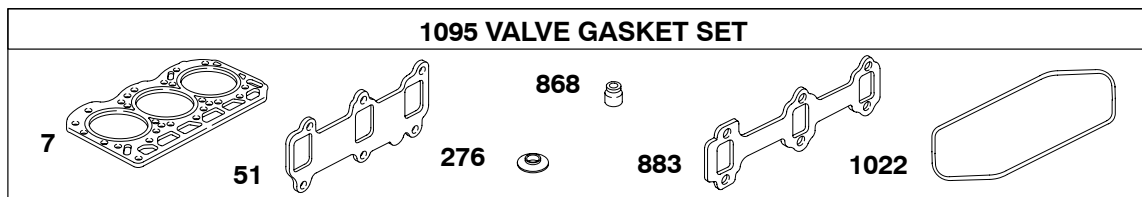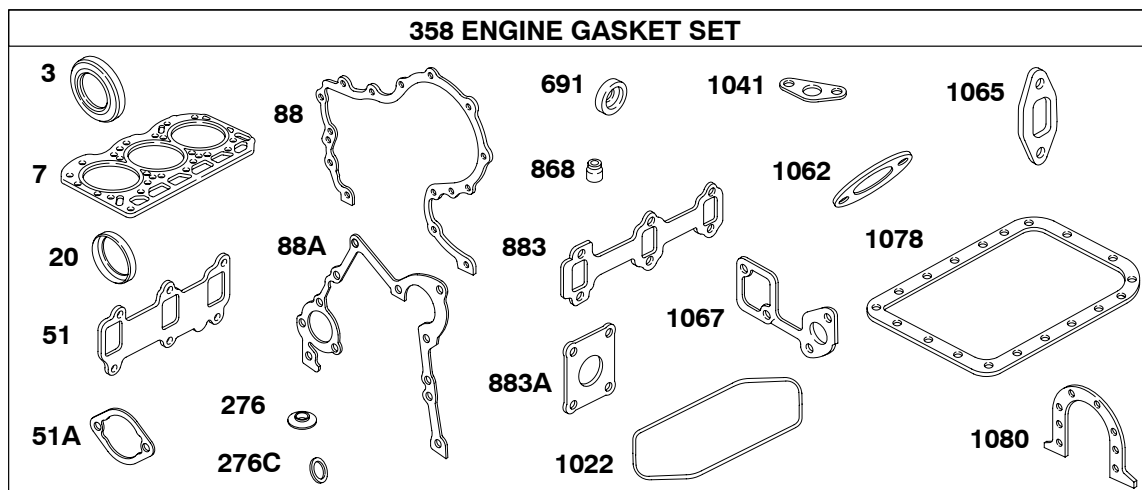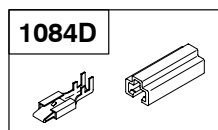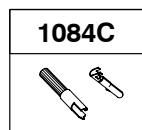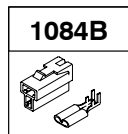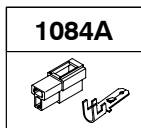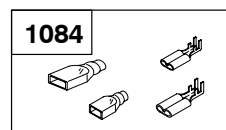

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	821071	Seal-Oil (Magneto Side)	358	825378	Gasket Set-Engine	1080	820145	Gasket-Seal Retainer
7	820648	Gasket-Cylinder Head	691	820054	Seal-Governor Shaft	1084	825155	Connector-Terminal
20	821073	Seal-Oil (PTO Side)	868	820041	Seal-Valve	1084A	825156	Connector-Terminal
51	820087	Gasket-Intake	883	820817	Gasket-Exhaust (Manifold)	1084B	825157	Connector-Terminal
51A	820385	Gasket-Intake	883A	821001	Gasket-Exhaust (Muffler)	1084C	825158	Connector-Terminal
88	820148	Gasket-Gear Reduction Cover	1022	820150	Gasket-Rocker Cover	1084D	825154	Connector-Terminal
88A	820155	Gasket-Gear Reduction Cover	1041	820104	Gasket-Oil Pump Screen	1084E	825160	Connector-Terminal
276	820064	Washer-Sealing (Rocker Cover)	1062	820093	Gasket-Outlet Housing	1084F	825162	Connector-Terminal
276C	820582	Washer-Sealing (Oil Drain Plug) (16 mm)	1065	820098	Gasket-Inlet Housing	1084G	825163	Connector-Terminal
----- Note -----			1067	820100	Gasket-Water Pump	1084H	825266	Connector-Terminal
			1078	820137	Gasket-Oil Pan	1095	825379	Gasket Set-Valve

Engine Gasket Set-Reference 358

Carburetor Overhaul Kit-Reference 121, 121A
Valve Gasket Set-Reference 1095

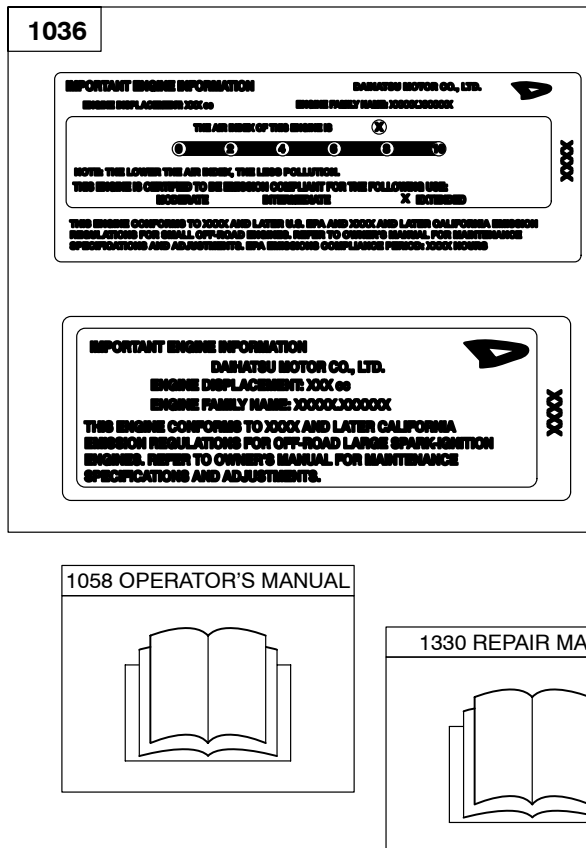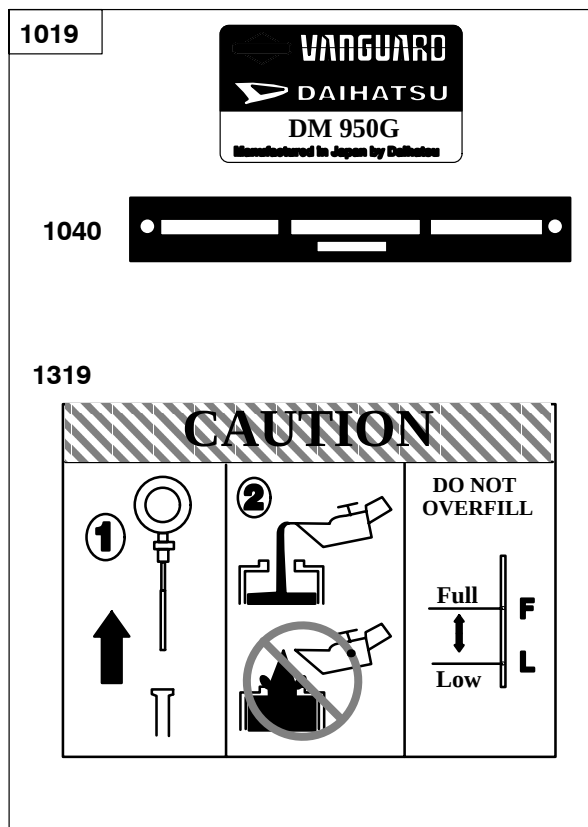

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1019	825618	Kit-Label	1036		Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)	1058	820883	Operator's Manual
						1040	820290	Plate-Trim
						1319	821160	Label-Warning
						1330	MS0750	Repair Manual (Refer to Repair Manual For Assembly and Torque Requirements)

Engine Gasket Set-Reference 358

Carburetor Overhaul Kit-Reference 121, 121A
Valve Gasket Set-Reference 1095